


SAVE THESE INSTRUCTIONS

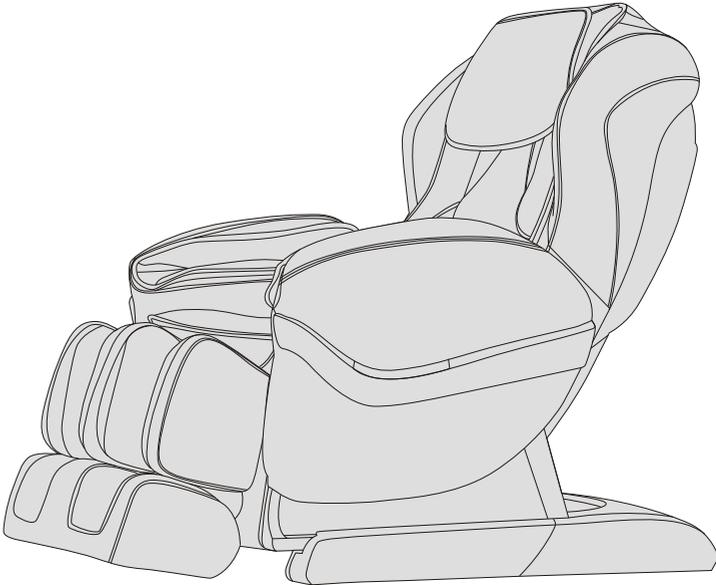

Thanks for purchasing this product. Please read this manual instruction carefully in order to know how to use this product correctly before operation. Please pay more attention to some important safety warning and keep this manual book properly for future use.

Note: Our Company reserves the right to revise the design and description of this product without any further notice. Please refer to the actual color of this product.

CONTENTS

Safety and maintenance	02
Name and function of components	04
Function	05
Method of usage	06
Product specification	14

Safety and maintenance

1. Important Safety Warning.



- Don't allow children to touch moveable part of this product.
- Please use well-grounding power supply suited to this product.
- Please pull out the plug after use or before cleaning to avoid injury or Damage to the product.
- Please operate this product according to this manual instruction.
- Don't use accessories which are not recommended.
- Don't use this product outdoors.
- Please read this manual instruction carefully before operation.
- Any other usage that is not listed in this manual instruction is forbidden.
- 20 minutes of usage each time is recommended.
- Please don't use it if the leather is broken or damaged.
- Please don't use it if the cover or leather is damaged.
- Please don't use it if the radiator hole is covered or blocked.
- Please don't drop anything into this product.
- Please don't fall asleep while using this product.
- Please don't use it if drunk or feel unwell.
- Please don't use it within one hour after having meal.
- Please don't make the massage function too strong for avoiding Injury.

2. Environment for usage.

- Please don't use it under high temperature and moist environment such as bathroom.
- Please don't use it immediately while the environmental temperature changes sharply.
- Please don't use it under heavy-dusty or caustic environment.
- Please don't use it where there is not enough space or not good ventilation.

3. People who are not suitable to use this product.

- People who are suffering from osteoporosis are not suitable to use this product.
- People who are suffering from heart disease or carrying electronic medical equipment such as heart pacemaker are not suitable to use this product.
- People who are suffering from fever are not suitable to use this product.
- Pregnant women or women that are in menses period are not suitable to use this product.
- People who got injured or skin disease are not suitable to use this product.
- Children under 14-year old or people mentally unbalanced without being Supervised are not allowed to use this machine.
- People who are told by doctor to have rest or people who feel unwell are not suitable to use this product.
- People whose bodies are wet are forbidden to use this product.
- The appliance has a heated surface. persons insensitive to Heat must be careful when using the appliance.

4. Safety.

- Check the voltage if it is suitable to the specification of this product.
- Don't use wet hand to pull the plug.
- Don't make water go inside this product to avoid electric shock or cause damage to this product.

Safety and maintenance

- Don't damage the wires or change the circuit of this product.
- Don't use wet cloth to clean the electric parts such as switch and plug.
- Be away from this product under power cut state to avoid injury if the power comeback suddenly.
- Stop using this product while it works abnormal, and please consult local agent immediately.
- Stop using this product if you feel unwell, and please consult health care doctor.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- If the supply cord is damaged, it must be replaced by the manufacturer, its Service agent or similarly qualified persons in order to avoid a hazard.


5. Maintenance.

- This product should be maintained by certain appointed agents, users are prohibited to disassemble or maintain by themselves.
- Please don't forget to cut the power after usage.
- Don't use this product if the socket looses.
- If this product will be left unused for long, please curl up the wires and reserve this product in dry and dustless environment.
- Don't reserve this product under high temperature or near fire and avoid longtime direct sunshine.
- If the detachable cord / supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a Hazard.
- Please clean this product by dry cloth. Don't use thinner, benzene or alcohol.
- The mechanical components of this product are specially designed and made, it is not necessary to be specially maintained.
- Don't use edged res to thrust this product.
- Don't roll or pull this product above uneven ground, it should be lifted before moving.
- Please use it intermittently; don't make this product work continuously for long.

6. Solution of ordinary malfunctions.

- It is nature movement voice if the motor sounds while in usage.
- If the controller can't work normally, please check the plug and socket if they are connected strongly and make sure the switch is turned on.
- If the rated working time is over, the product will automatically activate the power-off button; If this product works continuously for long, the temperature protector will make the product autom

Name and function of components

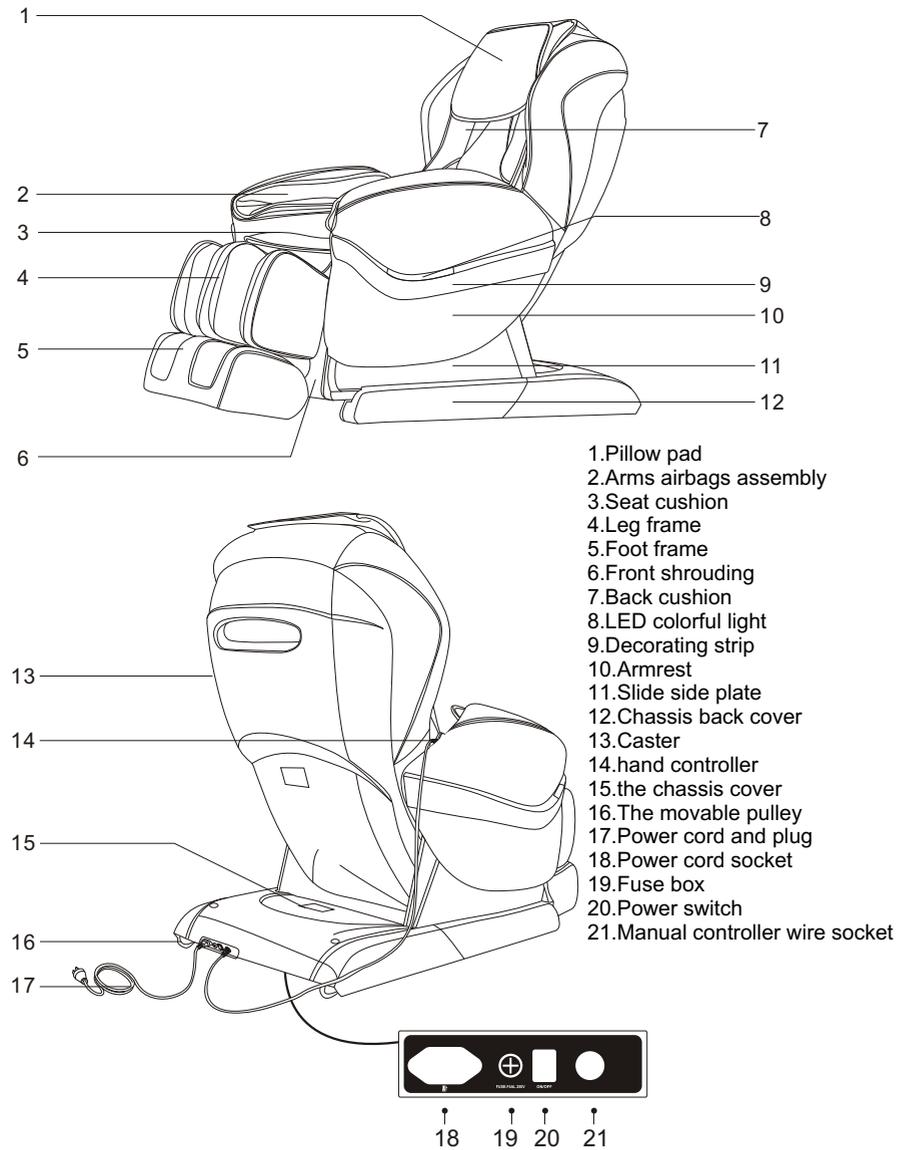

Function

Function :

- Designed with a set of vertically movable, four wheel driven muted intelligent massage hands.
- Designed with emulation massage methods of shiatsu, kneading, tapping, Knocking, simultaneous kneading and tapping.
- Designed with five automatic massage function: comfort, relax, decompress, neck and shoulder, back and waist.
- Designed with three massage memory function : M1, M2 and M3.
- Manual massage for the upper body with five options : partial, fixed, overall, neck and shoulder, back and waist massage. Each massage method with three levels of speed adjustable. In the state of fixed massage, the massage hands can be moved up and down; In the state of tapping, shiatsu and knocking, the width between the two kneading balls is adjustable with three levels: wide, medium and narrow.
- Air pressure massage function: three modes for choice, full body air pressure, arms (8pcs airbags), footrest (20pcs airbags), with three intensity optional.
- Back heating function, use carbon fiber as infrared heating source.
- With led blue light artistic effect on armrest.
- The calfrest is extendable to suite your height.
- Featuring the advanced “forward-sliding recline” technology. Enable full reclination for space-saving optimisation.
- The backrest lie down with the slide rail moving, seat part rise up, formed state of Zero gravity gradually.
- The calf rest and backrest can be reclined together and automatic lie-down mode adjustment function.

Method of usage



Note: The specific displays refer to the actual object of this product!

Method of usage


1. Switch power supply on



2. Start to massage

- Press the power button to start massage
- Detecting shoulder position and massage points, please wait till detection finished
- If the detecting position has deviation on actual shoulder position, adjust the position by the up and down buttons to get a suitable position. The shoulder position has 10 grades. If without adjusting within 10s, enter into massage automatically.

Buttons	Description	Display
	Move the massage balls upward to a suitable position	
	Move the massage balls downward to a suitable position	

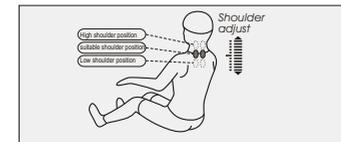

- Choose massage function to start massage
- Memory massage
Choose any of M1, M2, M3, it will back to the stored massage models to massage.

Buttons	Description	Display
Memory massage		Display the stored massage models
		Display the stored massage models
		Display the stored massage models

Method of usage

- Characterization of automatic massage

Function	Button	Massage characterization	Display
Characterization of automatic massage	RELAX	Depth massage on acupressure point, relax ache area	Auto F1
	COMFORT	Relax body muscles and bones	Auto F2
	Decompress	Promote blood circulation	Auto F3
	Neck & shoulder	Massage focus on neck and shoulder	Auto F4
	Back & waist	Massage focus on back and waist	Auto F5

- Upper body manual operation, lower body manual operation
- 1) Upper body manual operation

Function	Button	Adjusting of massage balls	Display
Operation	SHIATSU	Speed, width	
	KNEAD	Speed	
	TAP	Speed, width	
	KNEAD & TAP	Speed	
	KNOCK	Speed, width	
	speed	SPEED	3 speed adjustable
width	WIDTH	3 width adjustable	

Method of usage

Function	Button	Description	Display
Back stretch		Fixed position massage	H0
		Back and forth massage on small area (partial)	H1
		Back and forth massage on upper body (overall)	H2
		Back and forth massage on upper body (neck and shoulder)	H3
		Back and forth massage on upper body (back and waist)	H4
		Massage position adjusting (in fixed point, partial modes, the massage position is adjustable)	Massage hand move up
			massage hand move down

- Air massage

Function	Button	Description	Display
Full air	FULL AIR	Air massage on arms, legs, footrest	Arm Feet
Arms	ARM	Air massage on arms	Arm
Legs	LEG	Air massage on legs, footrest	Feet
Intensity	AIR PRESSURE INTENSITY	3 levels adjustable	Arm Feet

- Other manual functions

Function	Button	Description	Display
Heating	BACK/HEAT	Back far infrared heating function, has warm feeling after 3mins	

Method of usage

- Other manual functions

Function	Button	Description
Rise up button		Press this button, backrest goes up slowly, and calf rest goes down, stop when release it. If up to top, stop rising, sounds with “di-di-di” alarming.
Lie-down button		Press this button, backrest goes down slowly, and calf rest goes up, stop when release it. If down to bottom, stop down, sounds with “di-di-di” alarming.
Auto lie-down mode		The modes will change accordingly with each press, total with 3 modes

3. Turn off power, stop massage

- In massage process, press red button, all the massage function will stop, and you can store the massage modes, the back rest and calf rest will restore automatically. If up to the setting time, all the massage function will stop, but the back rest and calf rest will not restore.
- Memory function: manual controller screen will glitter with “memory”, you can choose M1, M2 or M3 as you need to store it, and the screen will display corresponding icons. Or press power button again, stop the machine, the massage hands, backrest, footrest will restore, or wait for 10s, it will stop automatically, massage hands, backrest, footrest will restore

Function	Button	Display
Memory massage		SA 1 Memory
		SA 2 Memory
		SA 3 Memory


Method of usage

- Cut off the power of the whole machine.
Figure (Switch power off)



Note

- When the machine under the working state, with lying and calf rest lifting, you could not apply gravity on the calf, to prevent the massage chair does harm to people before dumping.

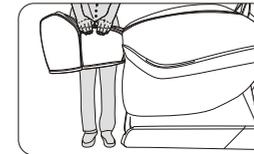

4. Calf rest linkage pole installation

- Open the packing (figure 1), switch on, move the massage chair through manual controller to the position as (figure 2)

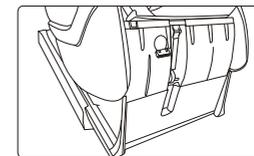


figure 1

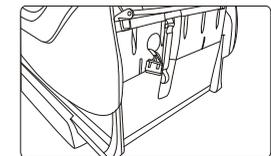


figure 2

- Take off the linkage pole from the seat inside, align at the hole, insert in the pin roll. (Figure 3)
- The installation finished. (Figure 4)

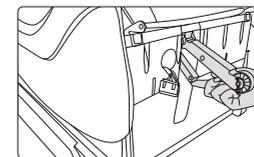


figure 3

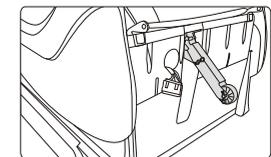


figure 4

Method of usage


- After the linkage pole installed, through the manual controller to restore the backrest, (figure 5), then install the calf rest.




figure 5

5.Calf installation

- Install the rotating shaft in calf fixed axis first, noticed the hole should be aligned, so that the R shape pin assembly (chart 1)
- After calf is connected with the fixed axis aligned, then insert (chart 2)

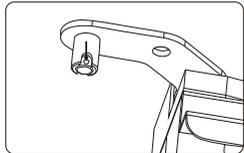


(chart 1)

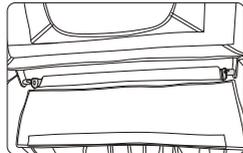


(chart 2)

- Plug R pin, then moved to the other side of the calf, and the plug R pin (chart 3)
- Finished (chart 4)

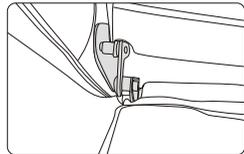


(chart3)

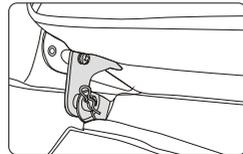


(chart4)

6.Pillow and backrest pad's dismounting and use manual

Using pillows can reduce the kneading massage intensity on shoulder and neck, according to your needs to decide whether the pillow pad is needed (recommend head cushions). Backrest cushion and backrest connected by zipper (1), head cushion and backrest pad connected by thread gluing (2)

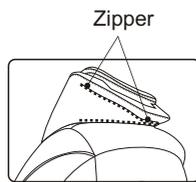

(1)

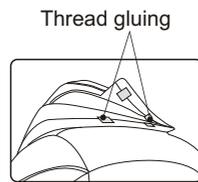


(2)

Method of usage

7.Floor Protection

Put the heavy massage chairs on the wood floor for a long time may damage the floor, so please place a carpet or other object to avoid this damage.

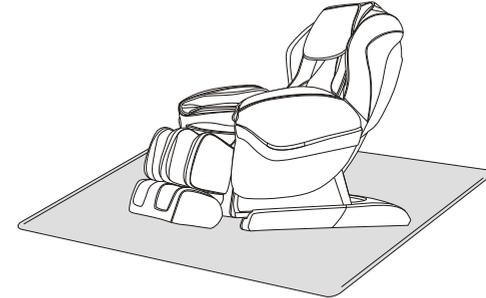


NOTED

Do not move the chairs with its wheels on wood floor, rough ground or in a narrow space. Two people are required to lift the chair. During the lifting period, the windscreen and backrest cover grooves as the focal point (Please do not lift armrest directly)

8.Method of movement

Make sure that all wires are far above the ground, tilt the backrest backward to a certain degree (with the gravity center resting on the wheels), push the chair forward or backward with your hands and finally resume the chair to the normal position in a slow and gentle manner.

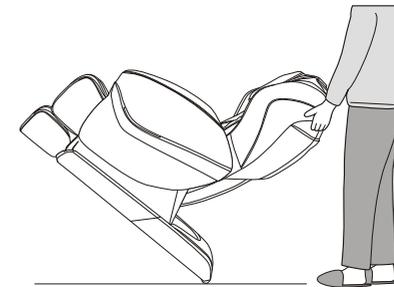

NOTED

During movement you must turn off the power switch first and then unplug the power line and hand controller connecting line

